
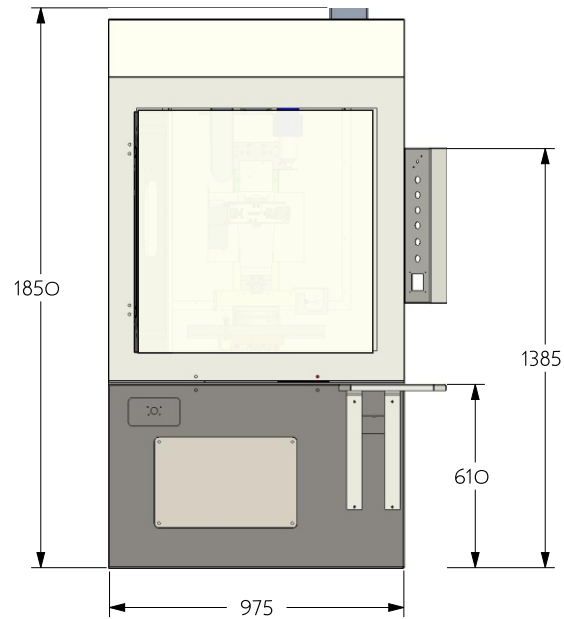



DIMENSIONS IN MM

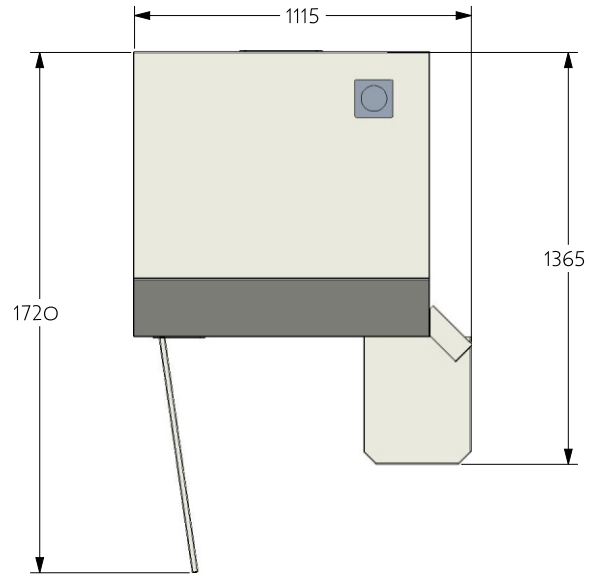


MODEL NO : OM-4HBL-DH

(WITH CABINET)


ELECTRICAL INSTALLATION GUIDE

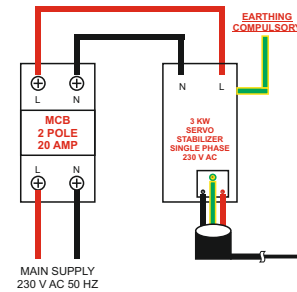

As shown below please fix the plug into the groove and move the plug in anti-clock wise direction. Now start the switch from your main supply board.

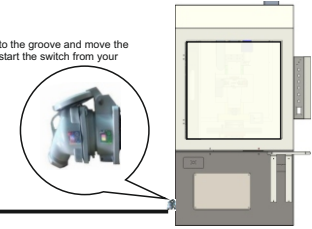

AIR INSTALLATION GUIDE



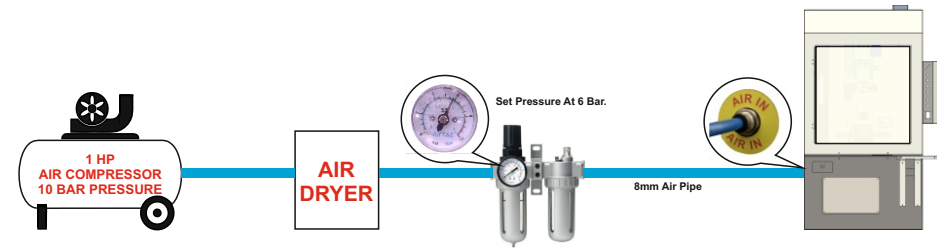


NOTE :
 * REMOVE ALL SHARAP EDGES.
 * ALL DIMENSIONS ARE IN MM



| Un specified Tolerance | | | Machine Name: | | OM AUTOMATION | | | | |
|------------------------|-------|-----------|------------------------|--|------------------|------|------|----------|----------|
| Over | Incl. | Tolerance | OM 4BL DH WITH CABINET | | | | | | |
| 0 | 6 | ± 0.1 | Part Name : | | | SIGN | DATE | SCALE: | NTS |
| 6 | 30 | ± 0.2 | | | DRG. | HJV | | SHEET NO | : 1 OF 1 |
| 30 | 120 | ± 0.3 | Part No: | | CHD. | | | | |
| 120 | 315 | ± 0.5 | | | APPD. | | | | |
| 315 | 1000 | ± 0.8 | Material: | | Heat Treatment : | | | | |
| 1000 | 2000 | ± 1.2 | | | | | | | |
| 2000 | 4000 | ± 2.0 | | | | | | | |

MODEL NO : OM-4HBL-DH

(WITHOUT CABINET)

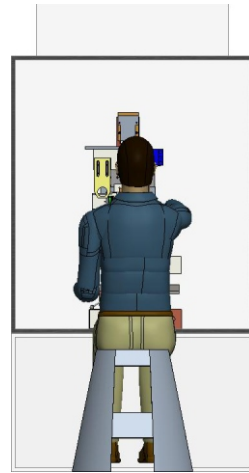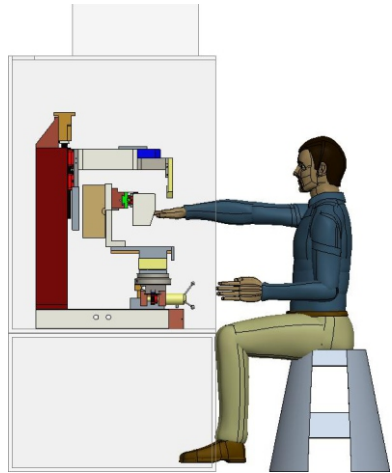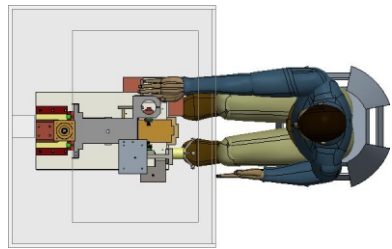

4x4 INCH SQUARE HOLE FOR WIRE

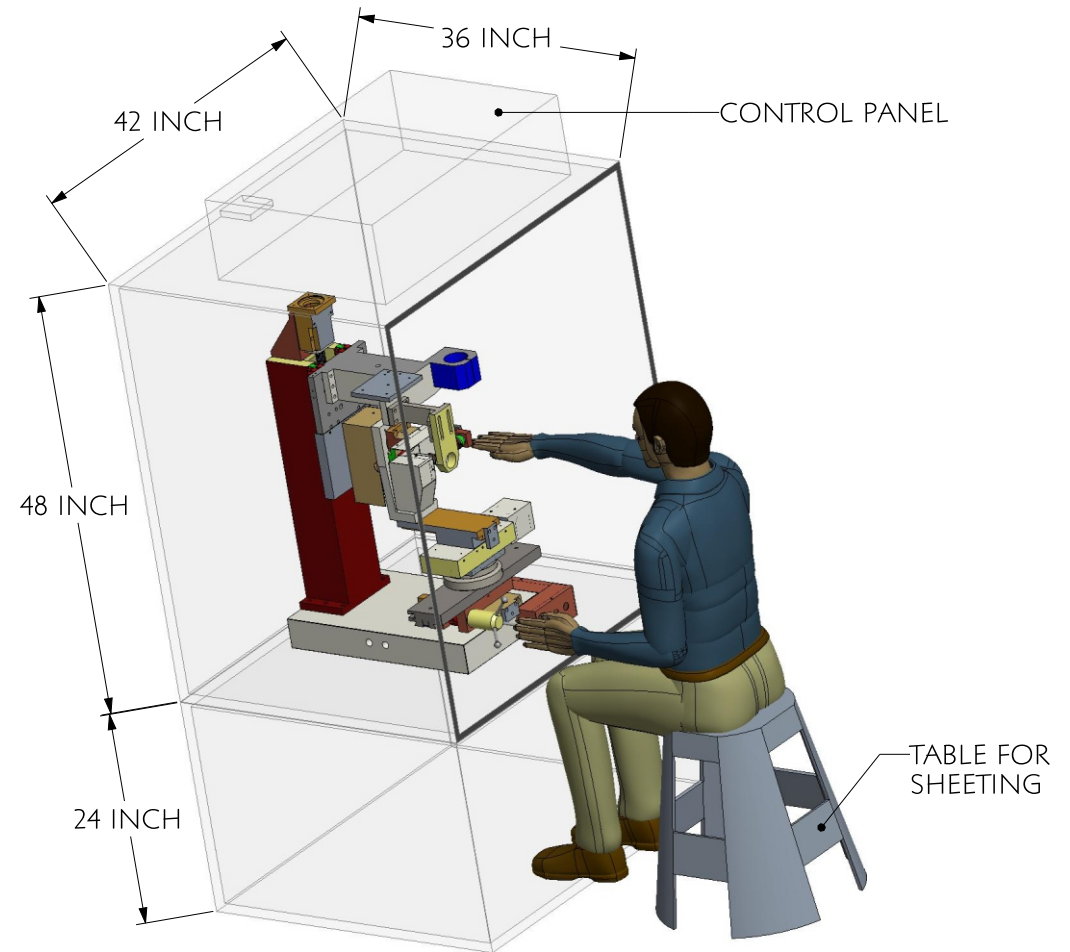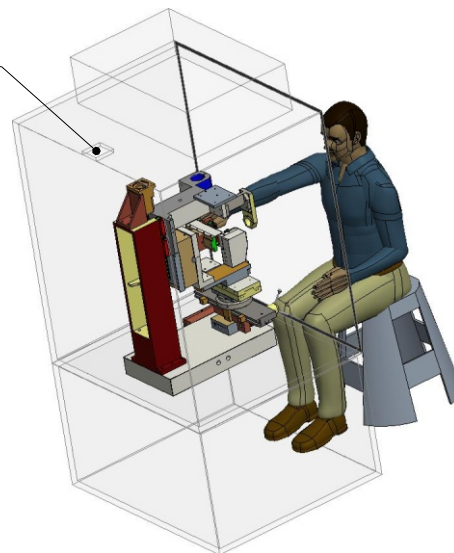

NOTE :
 * REMOVE ALL SHARAP EDGES.
 * ALL DIMENSIONS ARE IN MM

| Un specified Tolerance | | | Machine Name: | | OM AUTOMATION | | | | |
|------------------------|-------|-----------|---------------|--|------------------|------|------|--------|------|
| Over | Incl. | Tolerance | 4BL | | | | | | |
| 0 | 6 | ± 0.1 | Part Name : | | | SIGN | DATE | SCALE: | NTS |
| 6 | 30 | ± 0.2 | | | CABINE | | DRG. | HJV | 12/4 |
| 30 | 120 | ± 0.3 | Part No: | | | | | | |
| 120 | 315 | ± 0.5 | | | 001 | | CHD. | | |
| 315 | 1000 | ± 0.8 | Material: | | Heat Treatment : | | | | |
| 1000 | 2000 | ± 1.2 | | | | | | | |
| 2000 | 4000 | ± 2.0 | | | | | | | |