
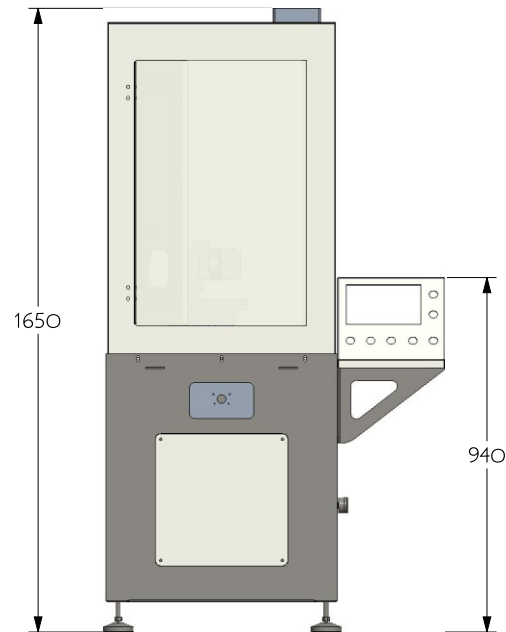



**DIMENSIONS IN MM**

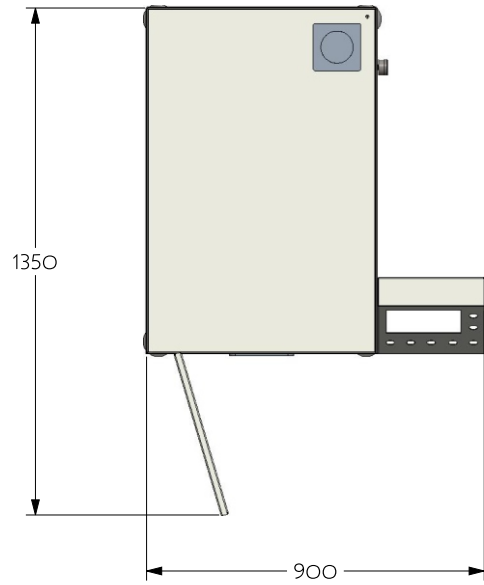


**MODEL NO : OM-3BL-SH**

**(WITH CABINET)**

**ELECTRICAL INSTALLATION GUIDE**

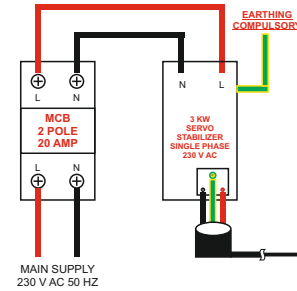

As shown below please fix the plug into the groove and move the plug in anti-clock wise direction. Now start the switch from your main supply board.

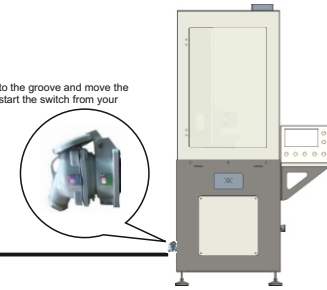

**AIR INSTALLATION GUIDE**



NOTE :  
 \* REMOVE ALL SHARP EDGES.  
 \* ALL DIMENSIONS ARE IN MM

Un specified Tolerance			Machine Name:		OM AUTOMATION				
Over	Incl.	Tolerance	OM-3BL-SH						
0	6	± 0.1	Part Name :			SIGN	DATE	SCALE:	NTS
6	30	± 0.2			DRG.	HJV		SHEET NO	: 1 OF 1
30	120	± 0.3	Part No:		CHD.				
120	315	± 0.5			APPD.				
315	1000	± 0.8	Material:		Heat Treatment :				
1000	2000	± 1.2							
2000	4000	± 2.0							