

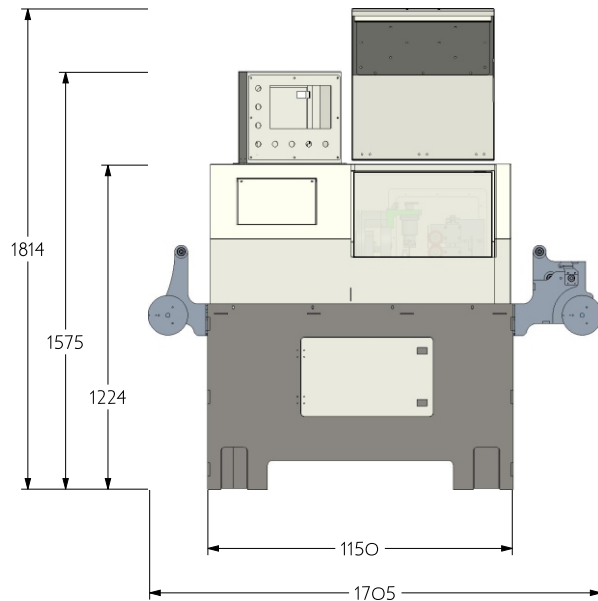
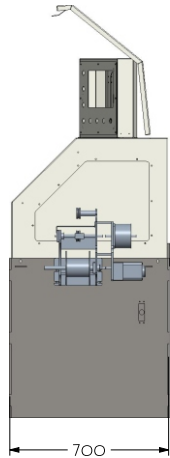


DIMENSIONS IN MM

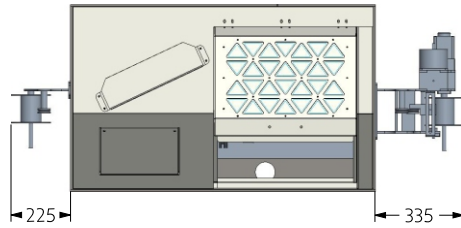


MODEL NO : OM-3WF-SH


ELECTRICAL INSTALLATION GUIDE

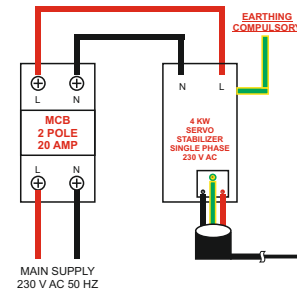

As shown below please fix the plug into the groove and move the plug in anti-clock wise direction. Now start the switch from your main supply board.

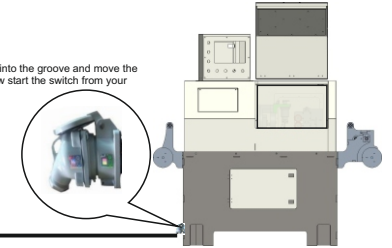

AIR INSTALLATION GUIDE

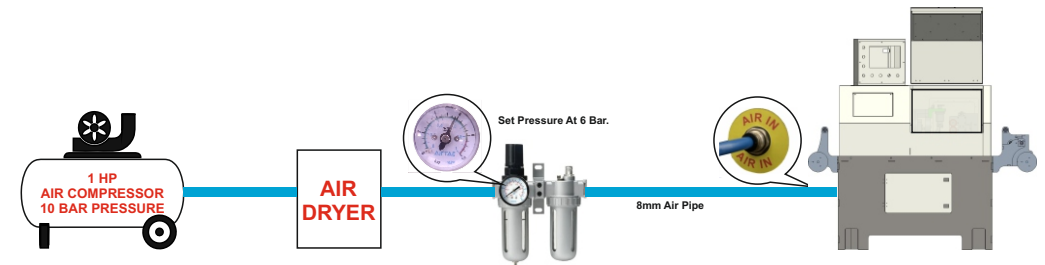

NOTE :
 * REMOVE ALL SHARAP EDGES.
 * ALL DIMENSIONS ARE IN MM

Un specified Tolerance			Machine Name:		OM AUTOMATION				
Over	Incl.	Tolerance	WIRE			SIGN	DATE	SCALE:	NTS
0	6	± 0.1	Part Name :		DRG.	HJV		SHEET NO	: 1 OF 1
6	30	± 0.2			CHD.				
30	120	± 0.3			APPD.				
120	315	± 0.5	Part No:		001				
315	1000	± 0.8	Material:		Heat Treatment :				
1000	2000	± 1.2							
2000	4000	± 2.0							